



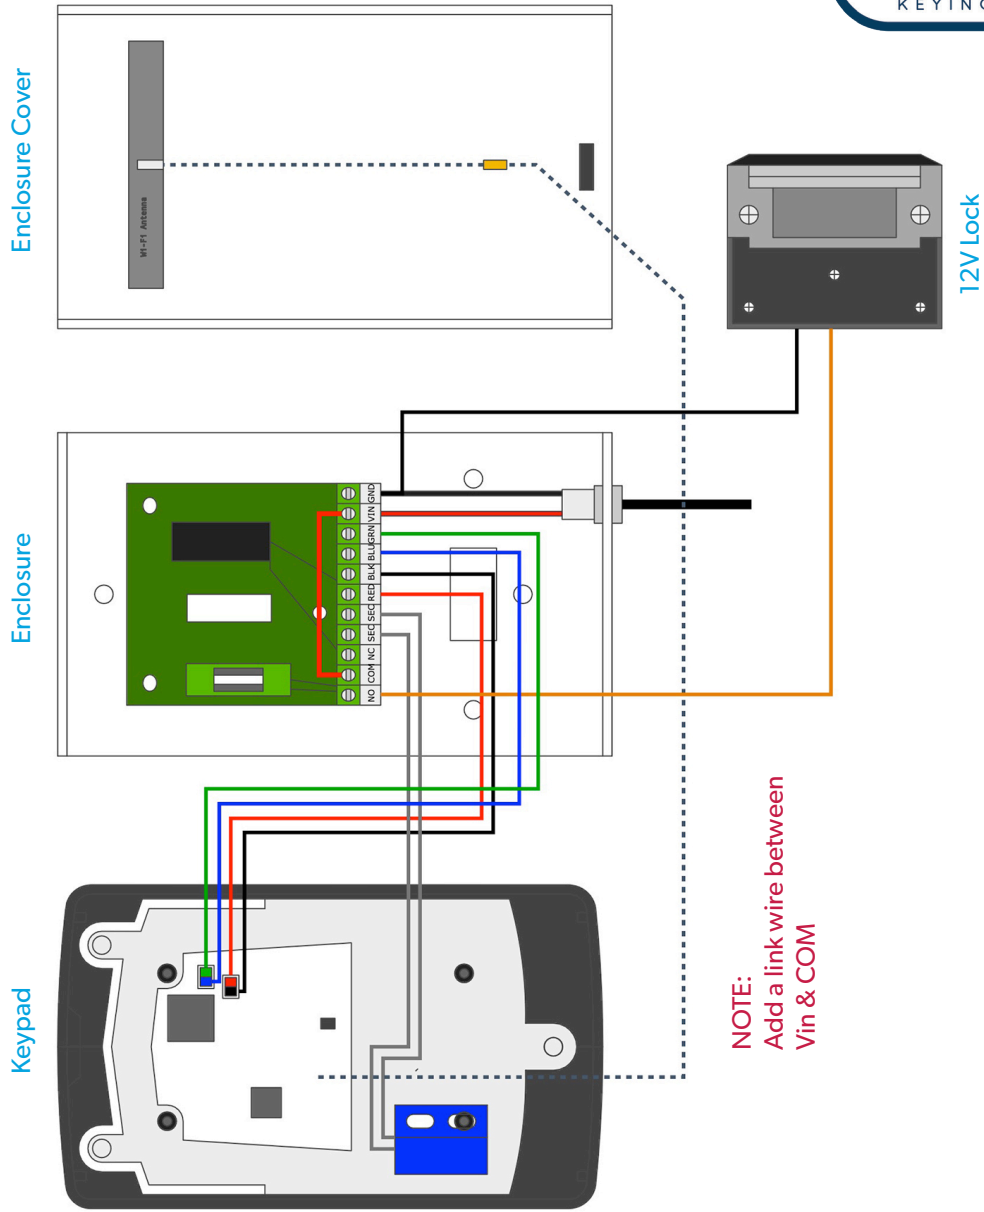

## 12V Wiring Diagram

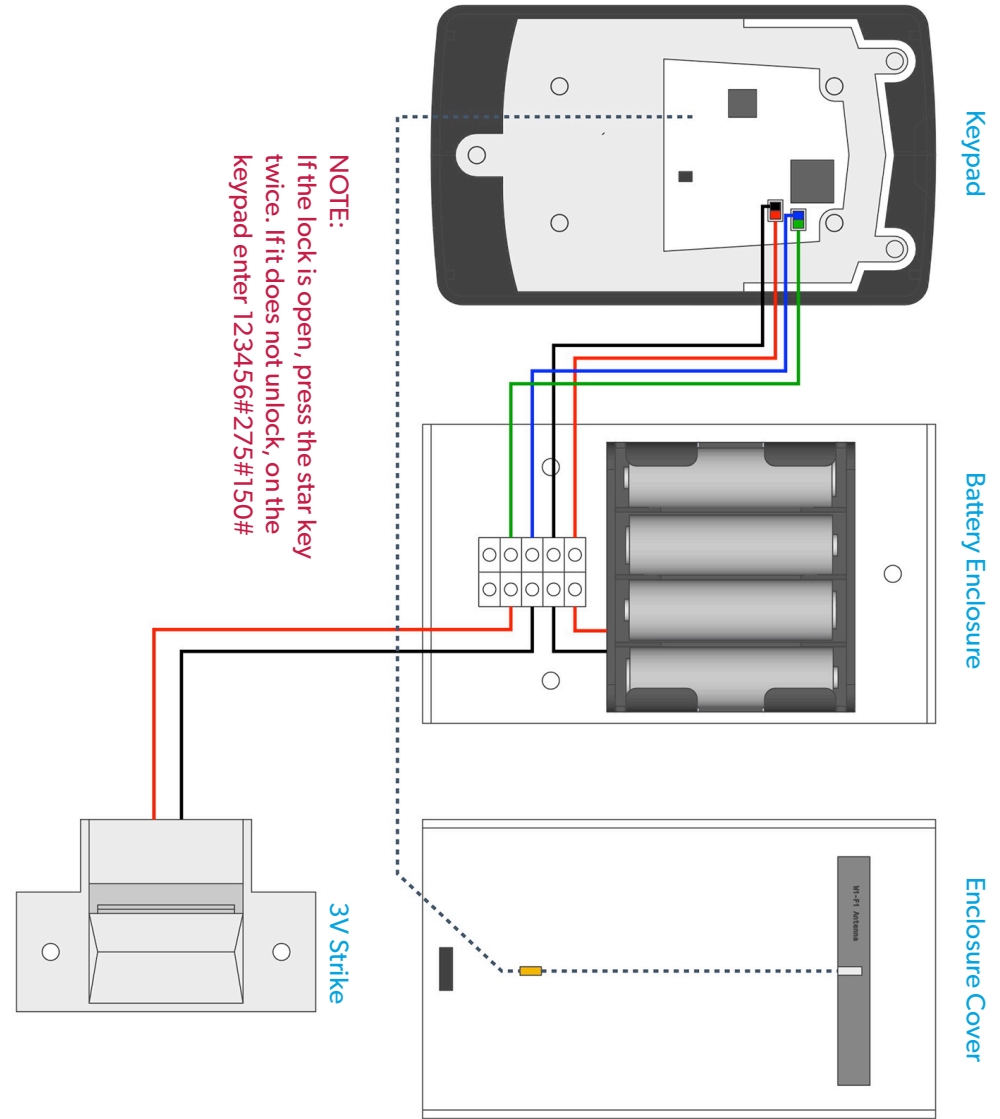

## Battery Wiring Diagram



You can use the keypad to perform several functions. These functions can also be performed remotely from the Remotelock software. All keypad functions follow the same general steps. The default Programming Code is: 123456

1. Enter your Programming Code followed by the # button.
2. Enter the Function Code followed by the # button.
3. Some functions will also require you to enter a value followed by the # button.

In the following examples, XXXX is your preferred code.

Add a Local User Code: Enter PROGCODE#110#XXXX# Delete Local User Code: Enter PROGCODE#120#XXXX#  
Change Programming Code: Enter PROGCODE#100#XXXXX# Reset Wi-Fi Connection: Enter PROGCODE#312#  
Factory Reset: Enter PROGCODE#135# Wi-Fi Update Interval to Always On: Enter PROGCODE#235#  
(Note, in the Remotelock software the Wi-Fi update interval will show as 1 hour)